

Vulcan Stove Fan Manual



Warning:

Do not oil your fan. It has been designed to operate without the use of oil. Oiling the fan is likely to cause it to cease. This is particularly true if the glass cylinder is oiled. Please be aware that parts of the fan will be very hot while in operation and will take time to cool down once removed from the stove.

Assembly

Your fan will arrive almost fully assembled. You simply just have to attach the fan blade which should only take a couple of minutes. Place the fan blade onto the front of the unit. You will find it fits quite snugly on to the front of the unit, in some cases a small amount of pressure may need to be applied. Rotate the blades until the screw holes are aligned. Screw in the four provided screws into the holes. Your fan is now ready to be used.

Handling your fan

Your Vulcan stove fan can be picked up by the blades when idle. This is particularly useful if the stove is still hot.

Using your fan?

Once your stove is up to temperature place the Vulcan stove fan onto the stove. Wait until the base of the Vulcan stove fan has heated (this should take only a few minutes) and then gently flip the fan clockwise, with enough force to allow the blades to rotate a few times. The fan will start to rotate slowly at first but will gain momentum. The higher the temperature of stove the faster the fan will operate. The surface temperature of the stove should be at least 150 C (300F).